



401 South Grand Ave., Santa Ana, CA 92705  
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

## Honda GROM

Foot Peg  
Part # 374-8-01



### Parts List

| Qty. | Description  | Part Number |
|------|--------------|-------------|
| 1    | Foot Peg Kit | 374-8-01    |
| 2    | Cotter Pin   | 005-CP11612 |

### IMPORTANT - PLEASE READ CAREFULLY

*We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a center stand or ideally a service lift during installation. Be sure to save all stock components for possible use later.*

### Warranty

Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.

### Installation Instructions

1. Remove OEM cotter pin and washer. Save washer for use with TBR foot peg.



2. Remove OEM pin, peg, and spring. Save pin and spring for use with TBR peg.



3. Install spring onto TBR peg as shown.




4. Install peg into mounting bracket; spring tab must go into cutout.



5. Insert pin through bracket, peg, and spring.



6. Install washer and new cotter pin.

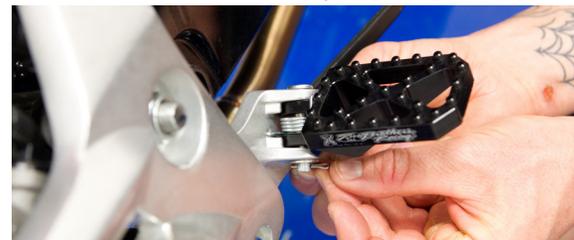

7. Bend tabs of cotter pin out and around pivot pin.

